PV+ Inter-Connect Copper Patch Cord
Installation Instruction

Instruction Sheet 4561150
Rev A.0

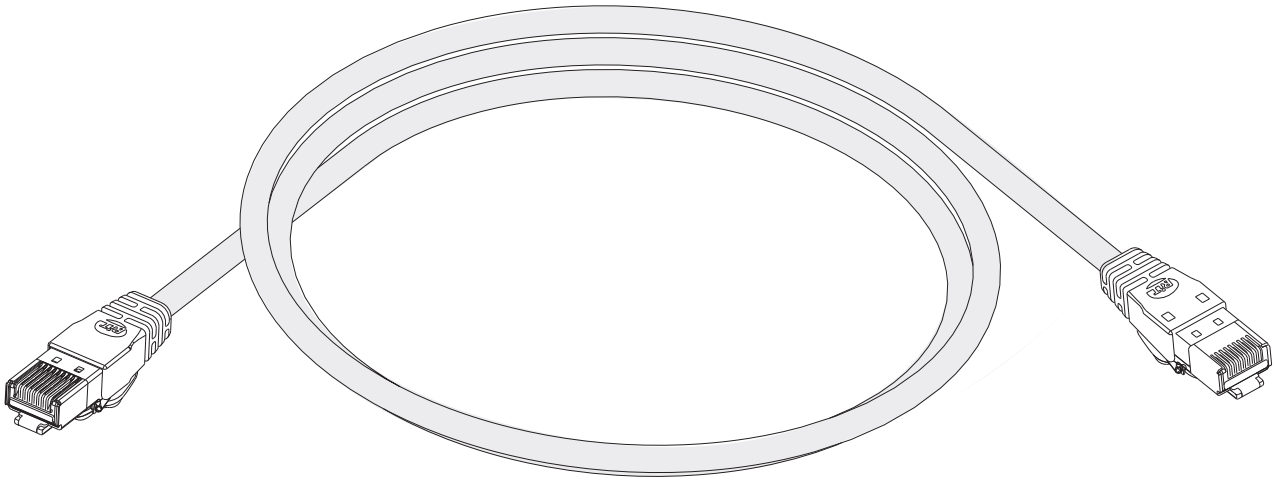

RiT PV+ Inter-Connect Copper Patch Cords are designed to connect between RJ45 ports of active equipment (populated with PV+ Copper ID-Keys) on one side and RJ45 Ports of RiT's PV+ Copper Frame on the other side.

PV+ Copper ID-keys located inside the RJ45 ports of the active equipment and 2 contacts below each RJ45 ports of the PV+ Copper Frame are used to monitor the physical layer connectivity when they are connected with a PV+ Inter-Connect Copper Patch Cords.

Fig-1 illustrates such a connection

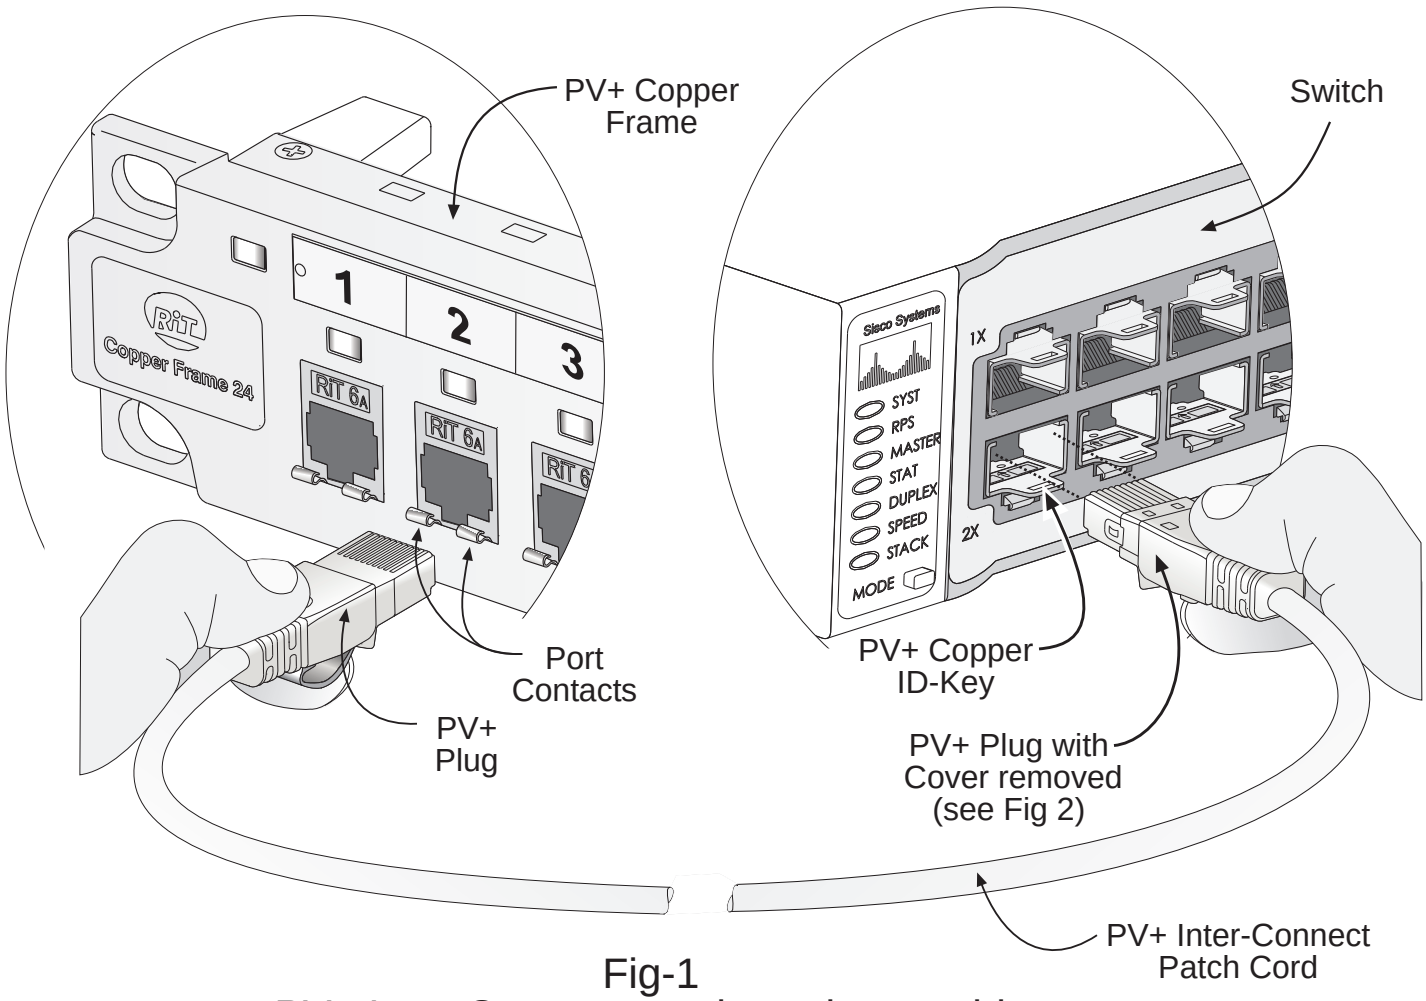

Fig-1
PV+ Inter Connect patch cord assembly

PV+ Inter-Connect Copper Patch Cord
Installation Instruction

Instruction Sheet 4561150
Rev A.0

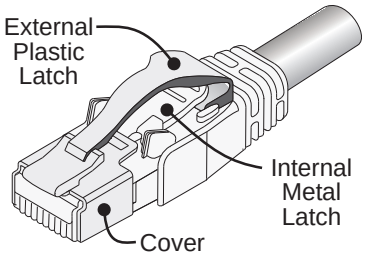

PV+ Inter connect plug

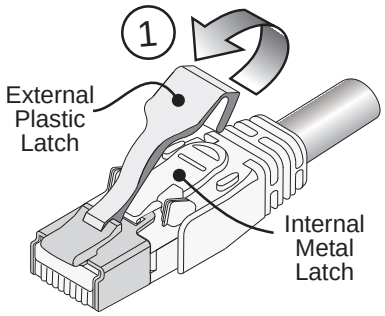

Release & Lift the
External Plastic Latch
over the Metal Latch

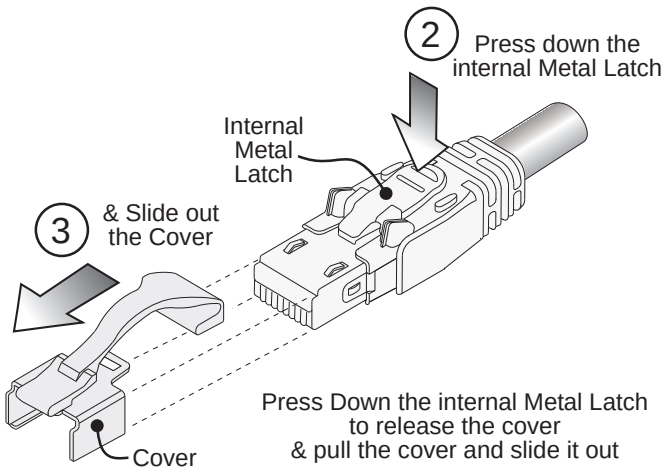

Fig-2
Removing the cover from a PV+ Plug

RIT International Headquarter
Tel: +972.77.270.7270
Fax: +972.3.647.4115
E-mail: mkt@rittech.com

RiT Office in China
Tel: +86.21.6445.3181
E-mail: marketing@rittech.com.cn

RiT Rep. in India
Tel: +91.22.611.0352
E-mail: mktg.india@rittech.com