PV+ LC-Duplex Fiber ID-Reader
Installation Instruction

Instruction Sheet 4561240
Rev A.0

The ID Reader is a part of the RiT's PV+ (PatchView Plus) system for real time monitoring and management of the network physical layer connectivity.
The ID-Reader is used for reading each Copper ID-key unique ID number by the PV+ Tablet application.
The data collected by the tablet application is then sent to the XpedITe platform.

Fig-1 illustrates how to connect and use the PV+ LC-Duplex Fiber ID-Reader

For more information about the PV+ tablet application, please contact RiT's technical support

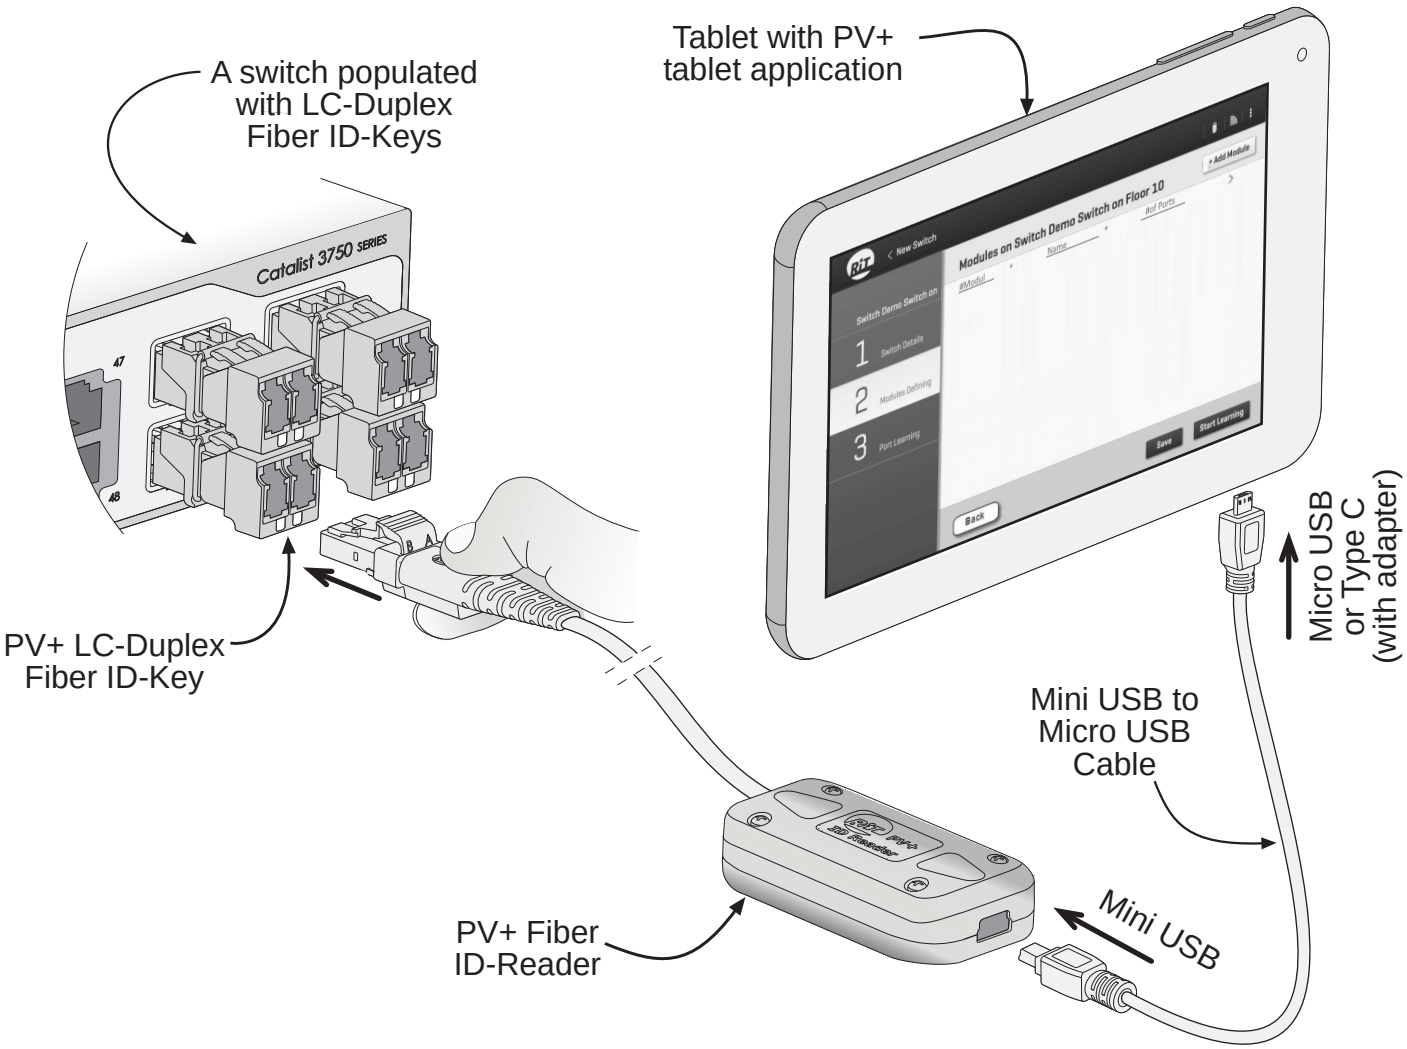

Fig-1
ID-Reader Setup Diagram

RIT International Headquarter
Tel: +972.77.270.7270
Fax: +972.3.647.4115
E-mail: mkt@rittech.com

RiT Office in China
Tel: +86.21.6445.3181
E-mail: marketing@rittech.com.cn

RiT Rep. in India
Tel: +91.22.611.0352
E-mail: mktg.india@rittech.com