STP & UTP Keystone jack

Installation Instructions

Instruction Sheet
4520260
REV. C.0

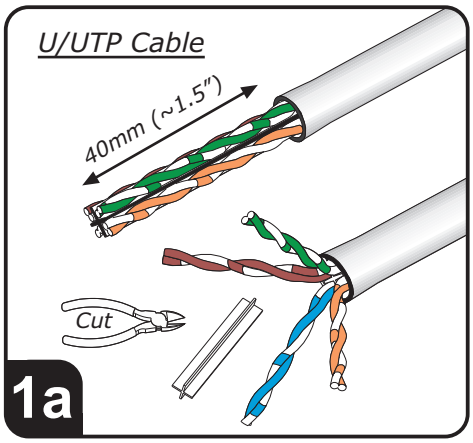

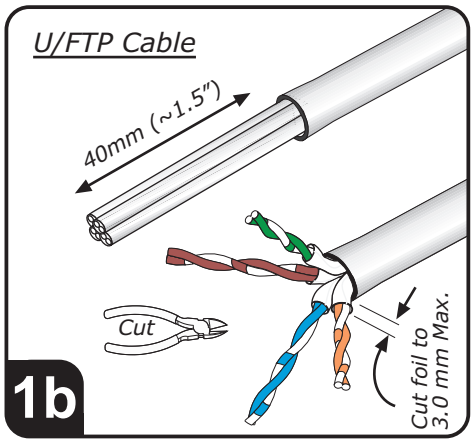

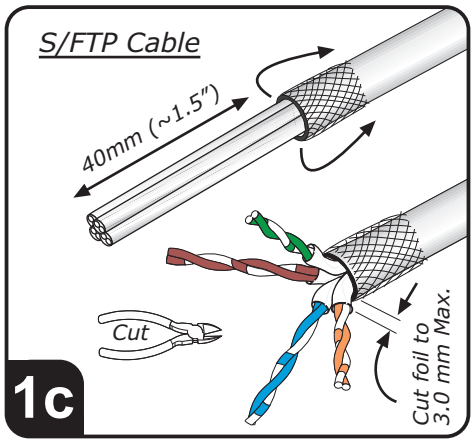

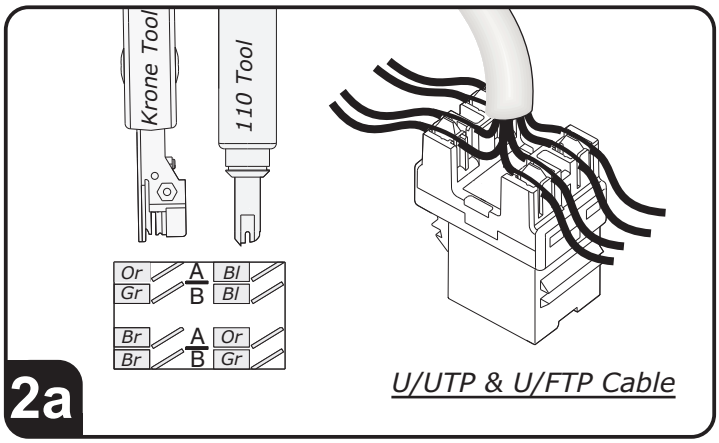

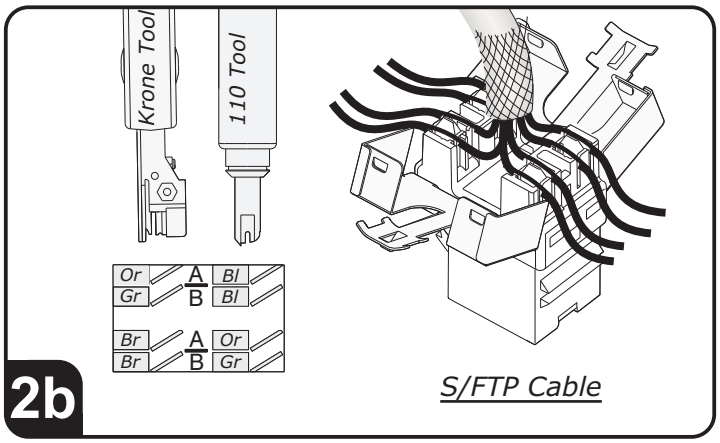

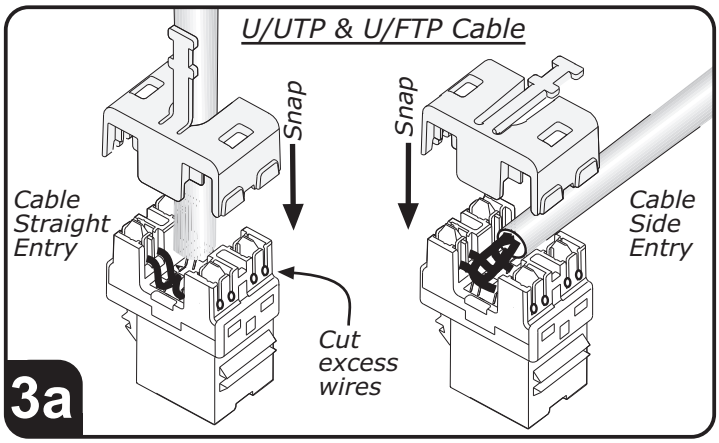

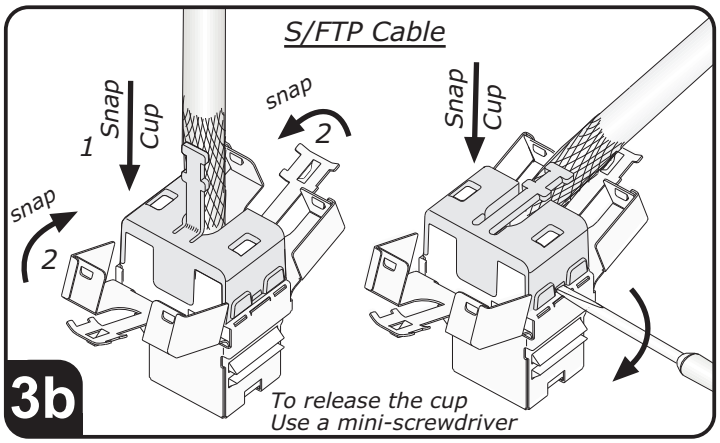

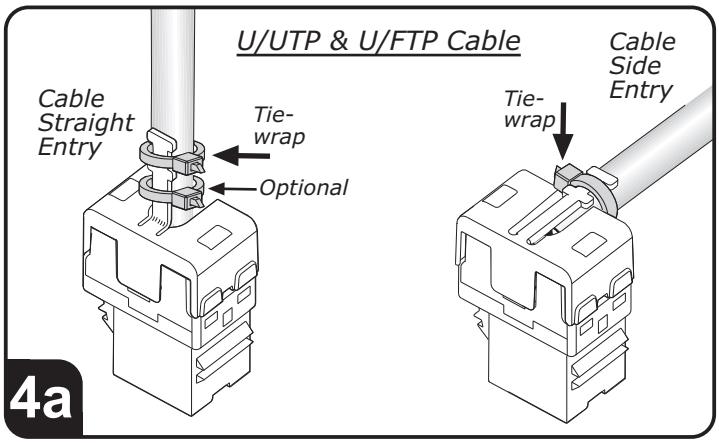

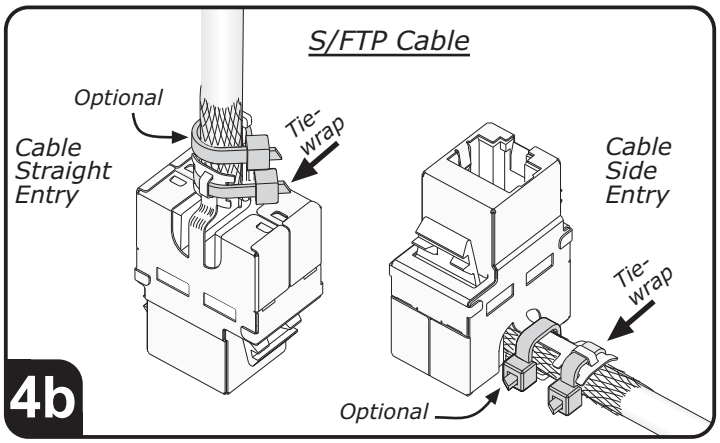

STP & UTP Keystone jack
Installation Instructions

Instruction Sheet 4520260
REV. C.0

To assist safe installations, comply with the following:

A. Never install telephone wiring during a lightning storm.
B. Never install telephone jacks in wet locations unless the jack is specifically designed for use in wet locations.
C. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
D. Use caution when installing or modifying telephone lines.

Notice:

1. Equipment is not intended to be connected to telecommunications network with voltages which are higher than typical telecom voltages (150Vrms to ground, 200Vp, 300Vp-p).
2. Conductors compatibility 22-24AWG solid, 24-26 AWG stranded.
3. Krone and 110 termination tool compatible.

Listing # E212279

U.S. Headquarters
RiT Technologies Inc.
Tel: 201-512-1970
Fax: 201-512-1286
1-800-RiT-1647
E-mail: Marketing@rittech.com

International Headquarters
RiT Technologies Ltd.
Tel: +972-3-645-5151
Fax: +972-3-647-4115
E-mail: mkt@rit.co.il