Keystone UTP / STP 24 Modular Panel
Installation Instructions

Instruction Sheet
4548850
Rev C.0

1

Package includes :

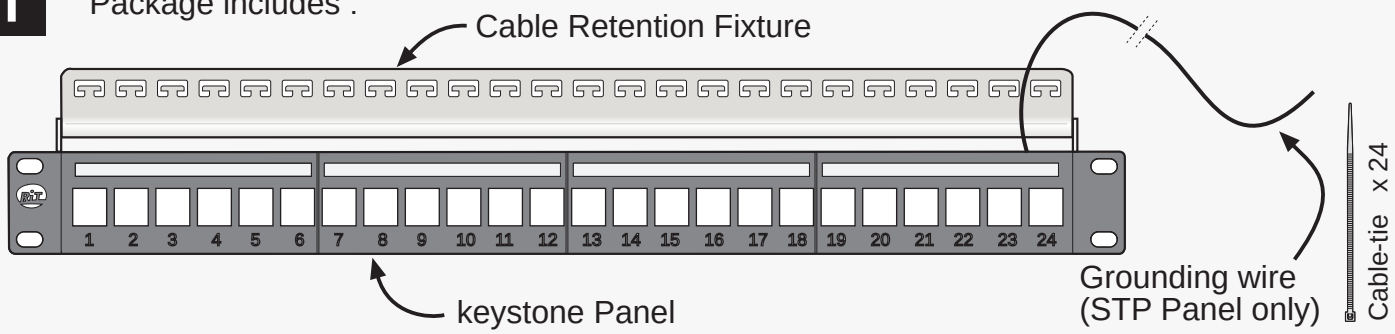

2

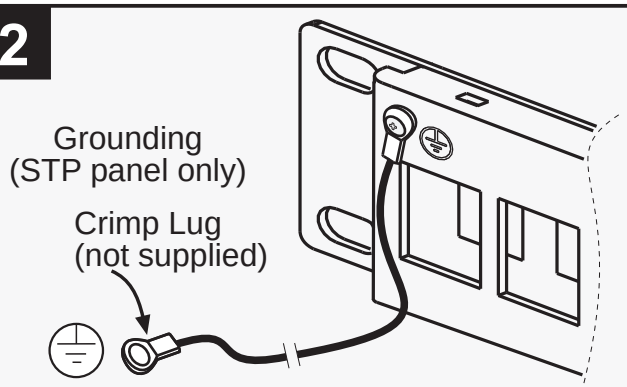

3

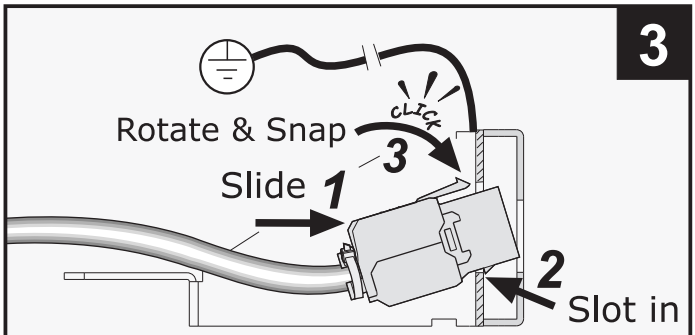

keystone insertion (STP panel)

4

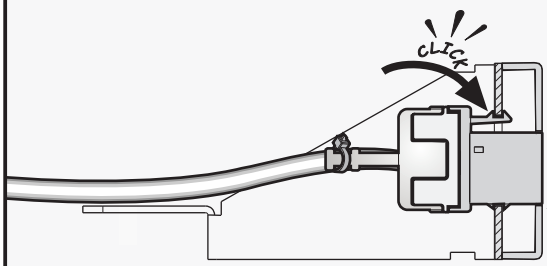

keystone insertion (UTP panel)

5

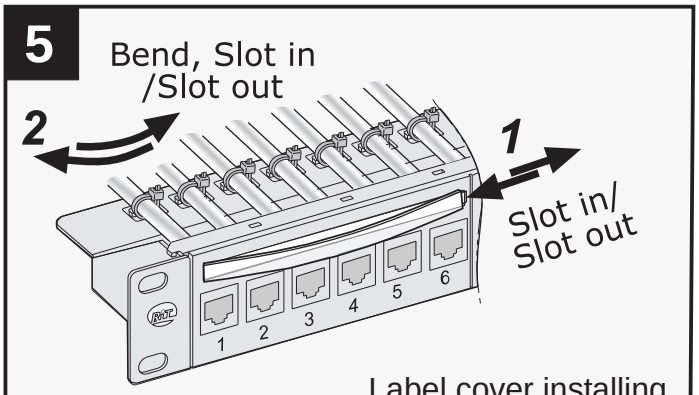

Label cover installing

6

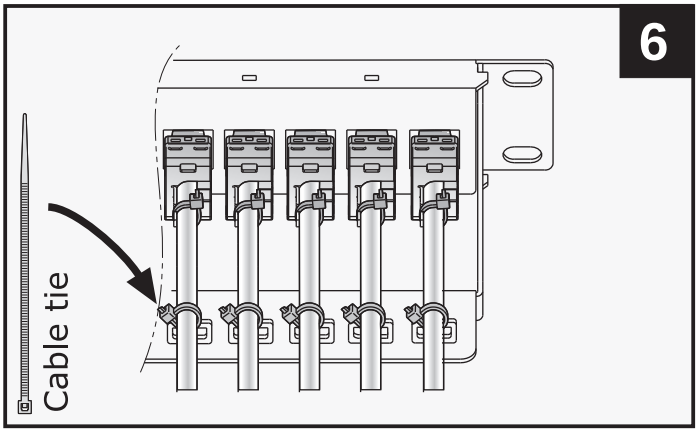

Keystone UTP/STP 24 Modular Panel

Installation Instructions (Cont.)

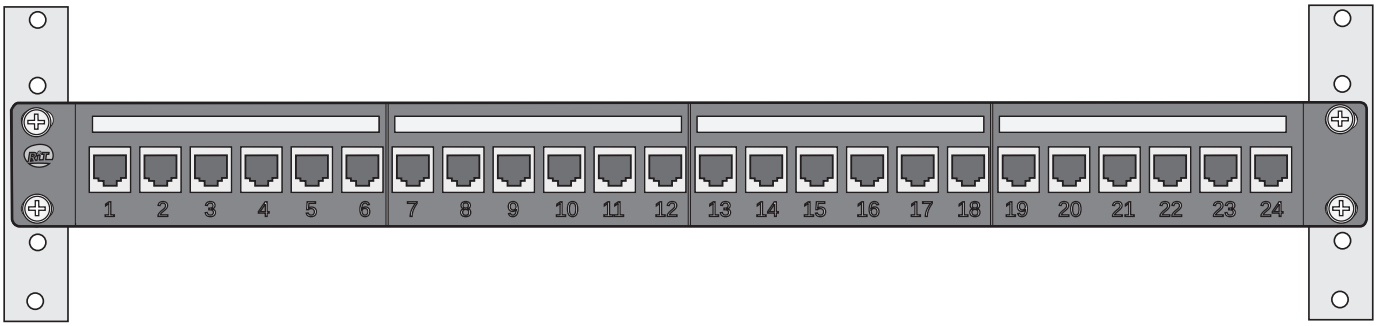

To assist safe installations, comply with the following:

A. Never install telephone wiring during a lightning storm.

B. Never install telephone jacks in wet locations unless the jack is specifically designed for use in wet locations.

C. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.

D. Use caution when installing or modifying telephone lines.

Notice:

1. Equipment is not intended to be connected to telecommunications network with voltages which are higher than typical telecom voltages (150Vrms to ground, 200Vp, 300Vp-p).

RIT International Headquarter
Tel: +972.77.270.7270
Fax: +972.3.647.4115
E-mail: mkt@rittech.com

RiT Office in China
Tel: +86.21.6445.3181
E-mail: marketing@rittech.com.cn

RiT Rep. in India
Tel: +91.22.611.0352
E-mail: mktg.india@rittech.com