SMARTen/CLASSix 48 STP SW Panel
Installation Instruction for STP Cable

Instruction Sheet
4553920
Rev. B.0

1

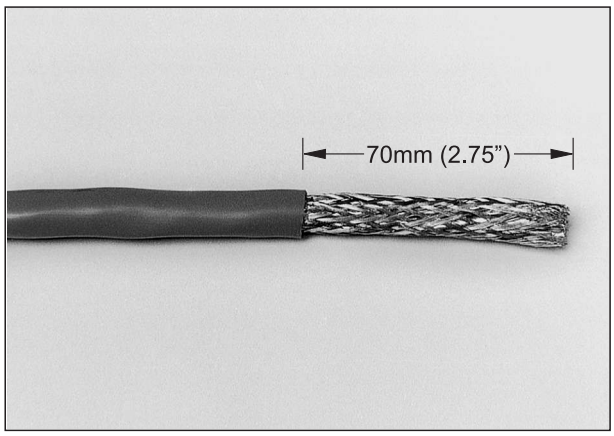

2

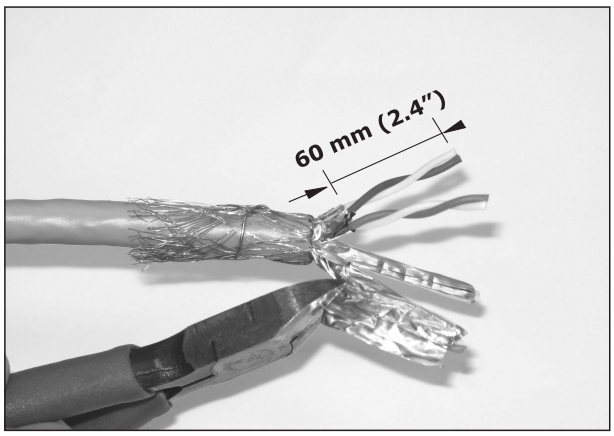

3

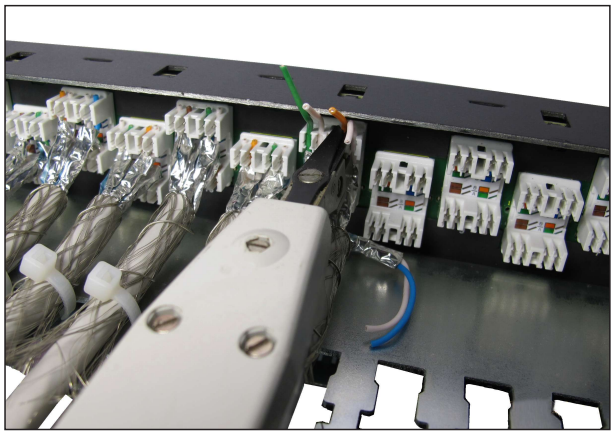

4

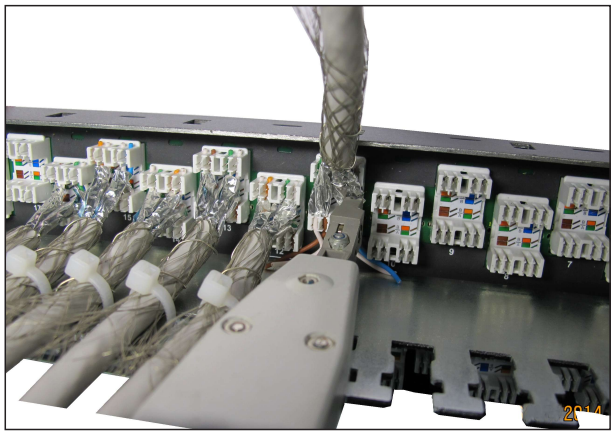

5

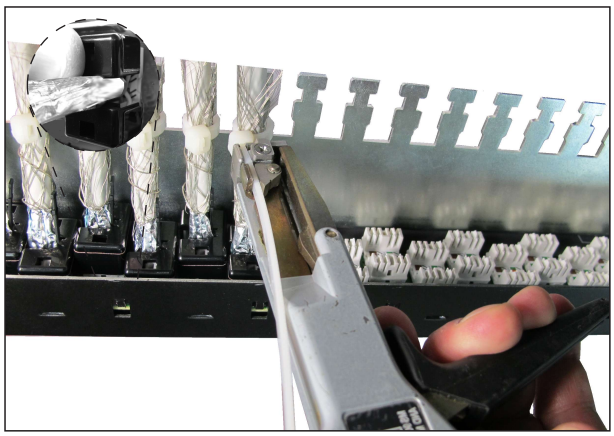

6

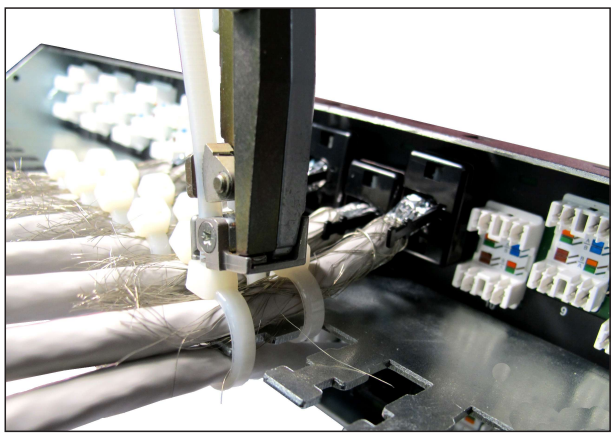

7

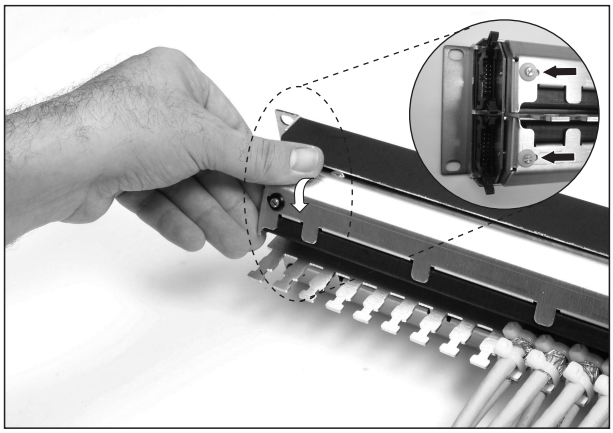

8

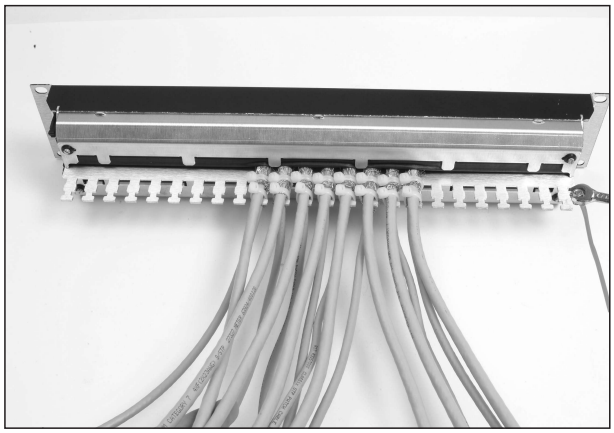

SMARTen/CLASSix 48 STP SW Panel
Installation Instruction for STP Cable

Instruction Sheet
4553920
Rev. B.0

9

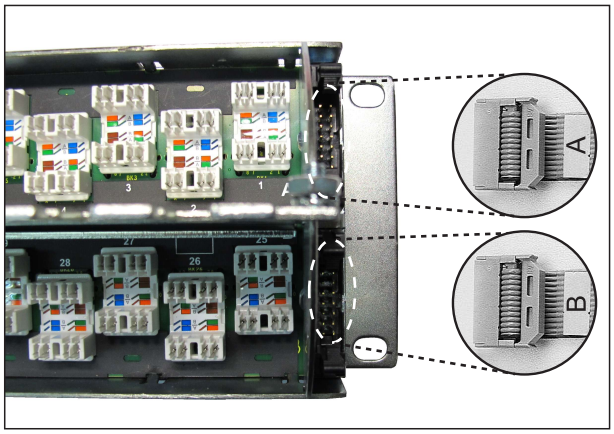

For PVMax installation: Connect cable end marked “A” to top panel. Connect cable end marked “B” to the next panel

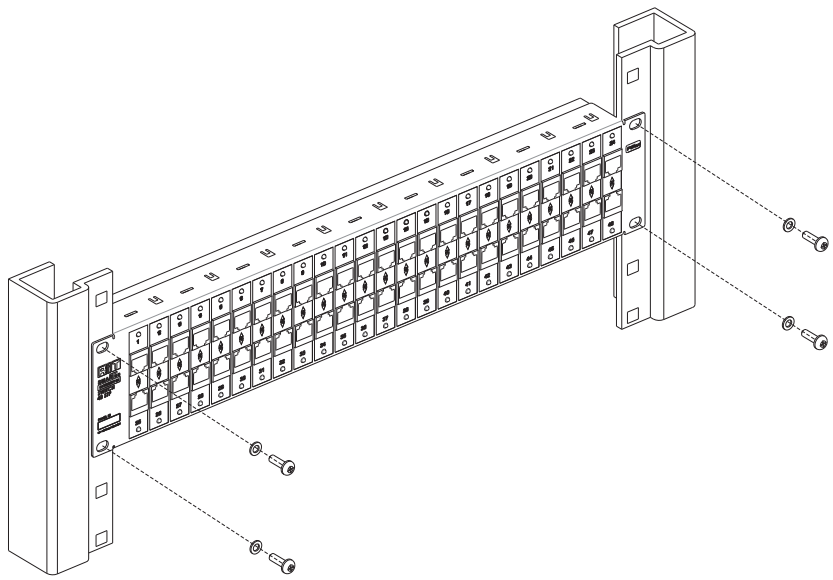

Using RiT P/Ns:
4 x 4419970 - Screw
4 x 3705150 - Washer
mount the Patch Panel to the desired position of a 19” relay rack.

Notice:

1. Equipment is not intended to be connected to telecommunications network with voltages which are higher than typical telecom voltages (150Vrms to ground, 200Vp, 300Vp-p).
2. Conductors compatibility 22-24AWG solid, 24-26 AWG stranded.
3. Krone and 110 termination tool compatible.

To assist safe installations, comply with the following:

A. Never install telephone wiring during a lightning storm.
B. Never install telephone jacks in wet locations unless the jack is specifically designed for use in wet locations.
C. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
D. Use caution when installing or modifying telephone lines.

RIT International Headquarter
Tel: +972.77.270.7270
Fax: +972.3.647.4115
E-mail: mkt@rittech.com

RiT Office in China
Tel: +86.21.6445.3181
E-mail: marketing@rittech.com.cn

RiT Rep. in India
Tel: +91.22.611.0352
E-mail: mktg.india@rittech.com