CAT8 HD Keystone Jack STP

Installation Instructions

Instruction Sheet
4556800
REV. A.0

Package Content :

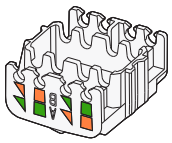

Wire Organizer

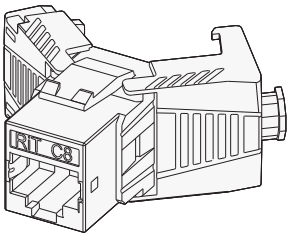

Keystone Jack

Copper Foil

Cable-Tie

S/FTP Horizontal Cable 22-24 AWG

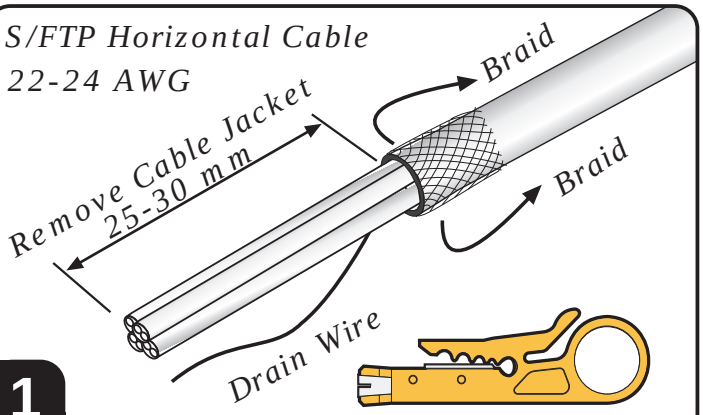

1

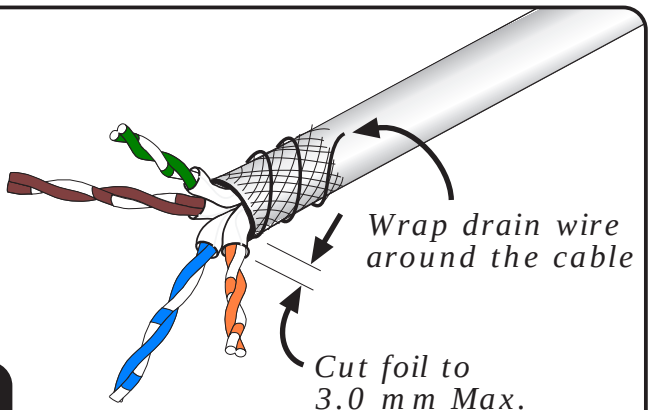

2

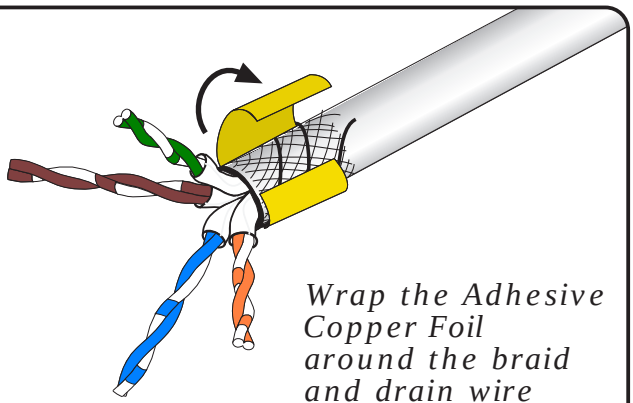

3

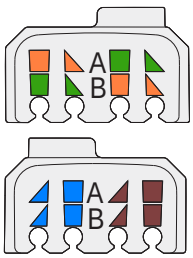

T568A/B

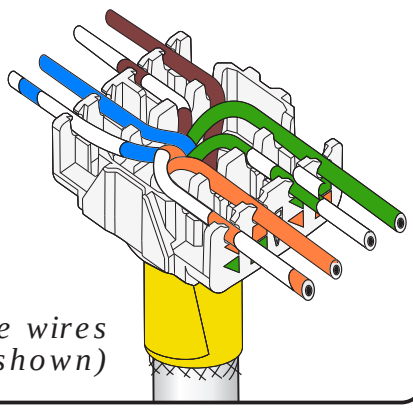

Arrange the wires
(T568B is shown)

4

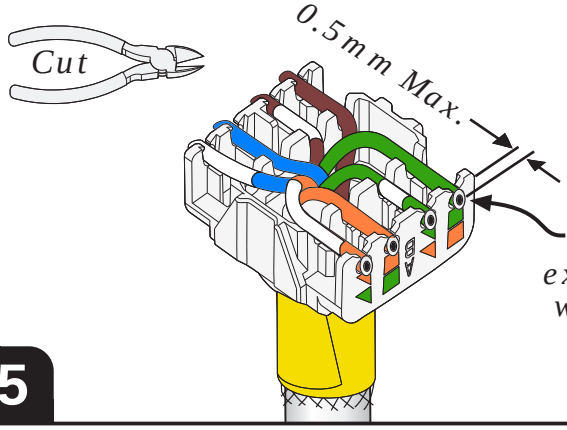

5

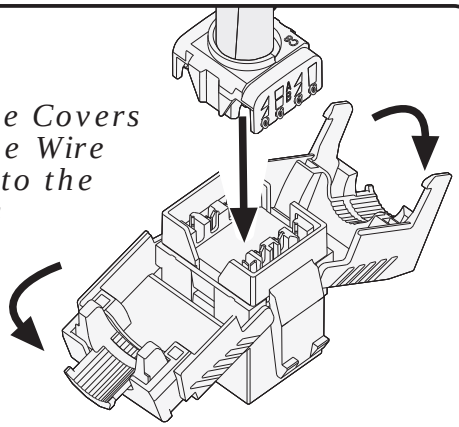

Open the Side Covers
and Insert the Wire
Organizer onto the
IDC Contacts

6

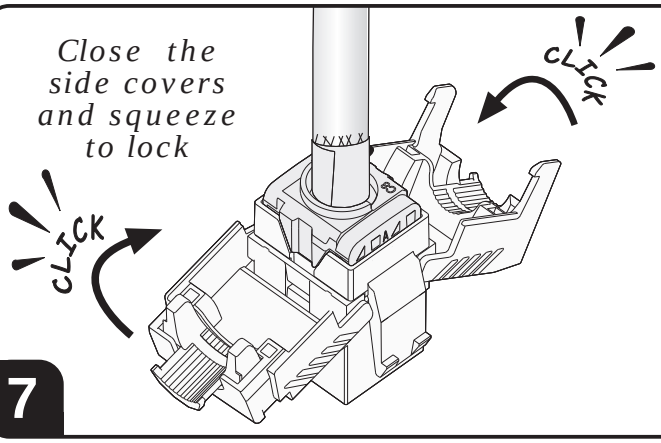

Close the
side covers
and squeeze
to lock

7

CAT8 HD Keystone Jack STP

Installation Instructions (Cont.)

Instruction Sheet
4556800
REV. A.0

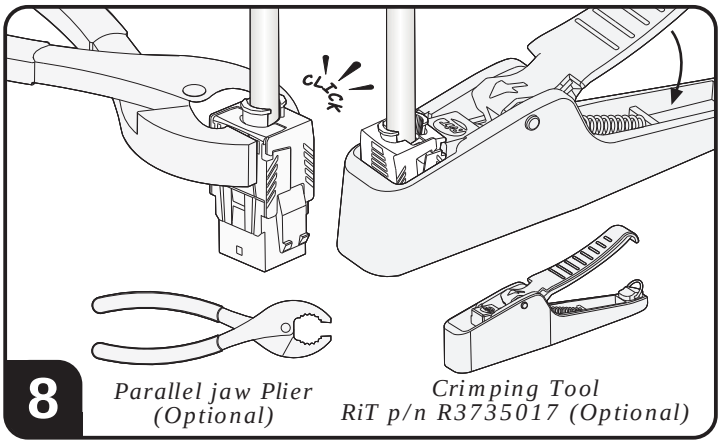

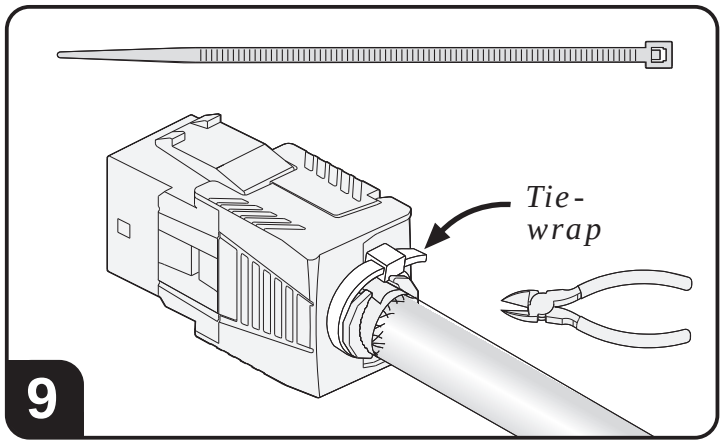

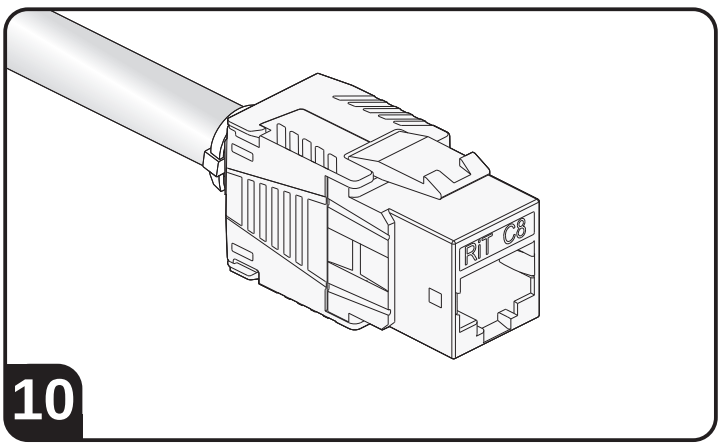

To assist safe installations, comply with the following:

A. Never install telephone wiring during a lightning storm.

B. Never install telephone jacks in wet locations unless the jack is specifically designed for use in wet locations.

C. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.

D. Use caution when installing or modifying telephone lines.

Notice:

1. Equipment is not intended to be connected to telecommunications network with voltages which are higher than typical telecom voltages (150Vrms to ground, 200Vp, 300Vp-p).

RIT International Headquarter
Tel: +972.77.270.7270
Fax: +972.3.647.4115
E-mail: mkt@rittech.com

RiT Office in China
Tel: +86.21.6445.3181
E-mail: marketing@rittech.com.cn

RiT Rep. in India
Tel: +91.22.611.0352
E-mail: mktg.india@rittech.com