PV+ COPPER FRAME 24 UTP/STP

Installation Instructions

Instruction Sheet
4557410
Rev A.0

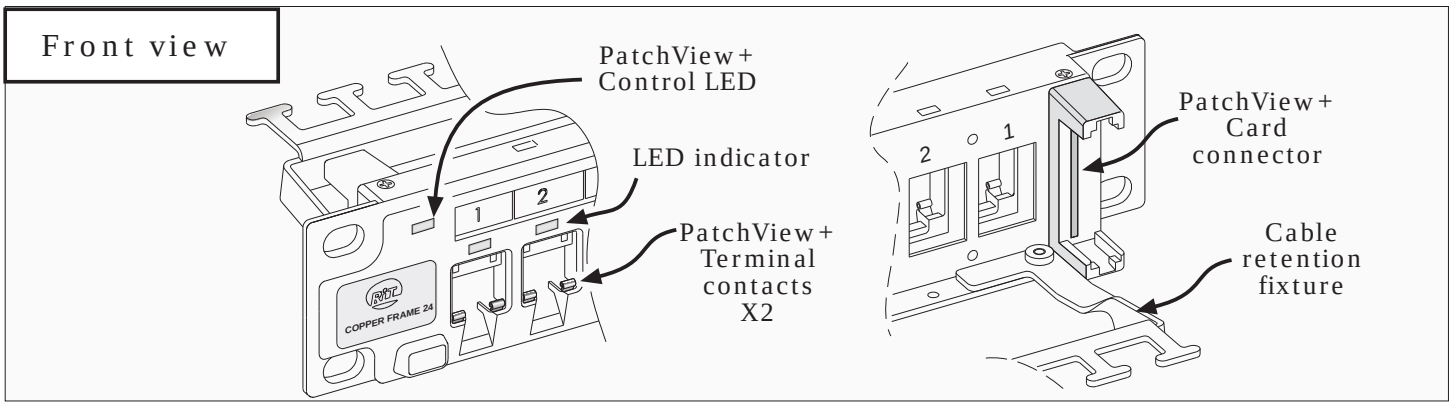

Assembly steps:

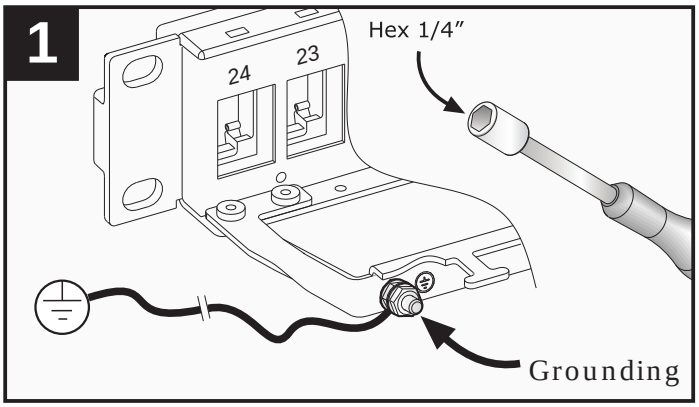

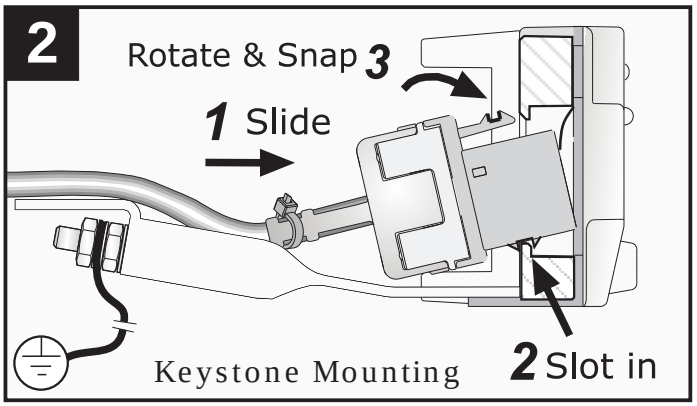

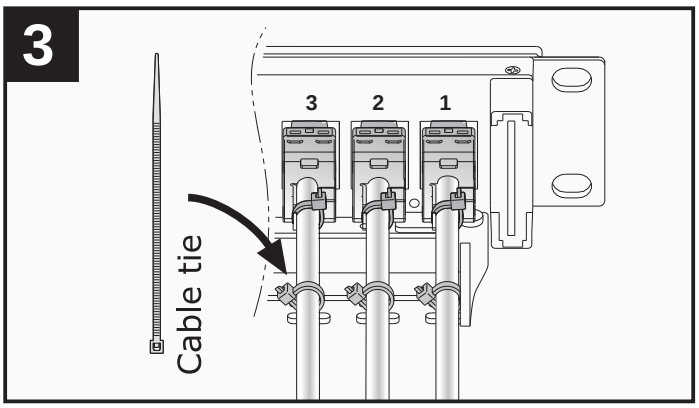

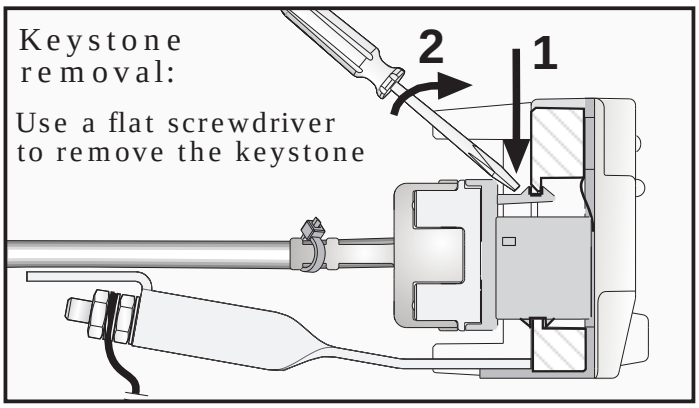

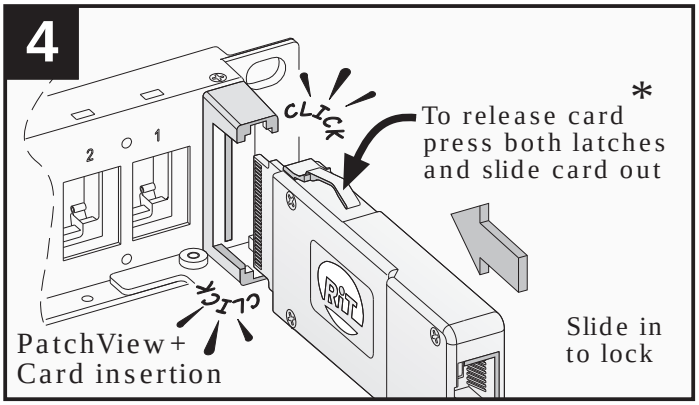

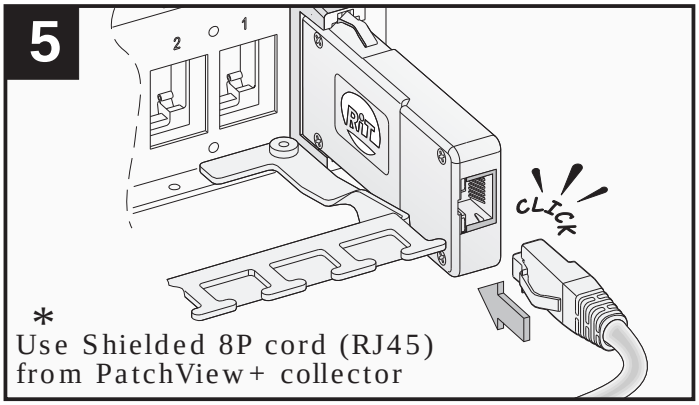

*Important Note: Make sure patch cord is disconnected before attaching/detaching PatchView+ card.

PV+ COPPER FRAME 24 UTP / STP

Installation Instructions

Instruction Sheet
4557410
Rev A.0

Port label replacement

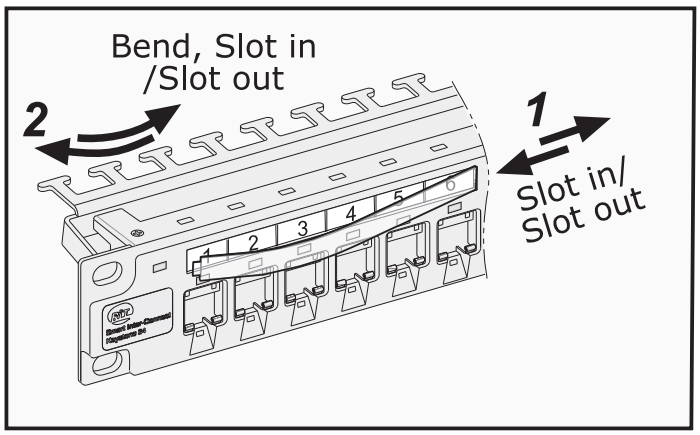

Cable retention fixture

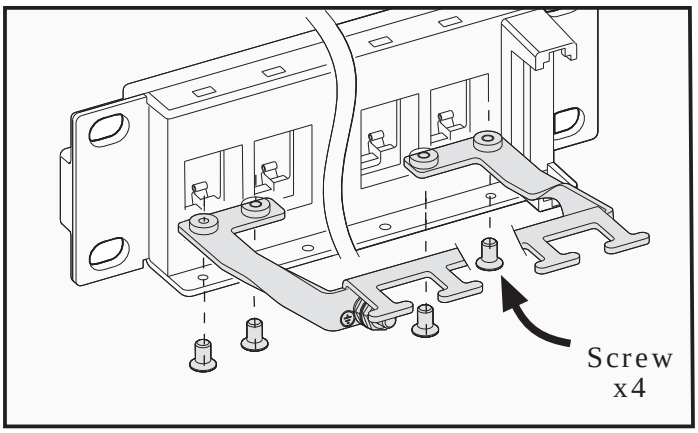

To assist safe installations, comply with the following:

A. Never install telephone wiring during a lightning storm.

B. Never install telephone jacks in wet locations unless the jack is specifically designed for use in wet locations.

C. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.

D. Use caution when installing or modifying telephone lines.

Notice:

1. Equipment is not intended to be connected to telecommunications network with voltages which are higher than typical telecom voltages (150Vrms to ground, 200Vp, 300Vp-p).

RIT International Headquarter
Tel: +972.77.270.7270
Fax: +972.3.647.4115
E-mail: mkt@rittech.com

RiT Office in China
Tel: +86.21.6445.3181
E-mail: marketing@rittech.com.cn

RiT Rep. in India
Tel: +91.22.611.0352
E-mail: mktg.india@rittech.com